




Ensure the quality of your wines by using filter cartridges

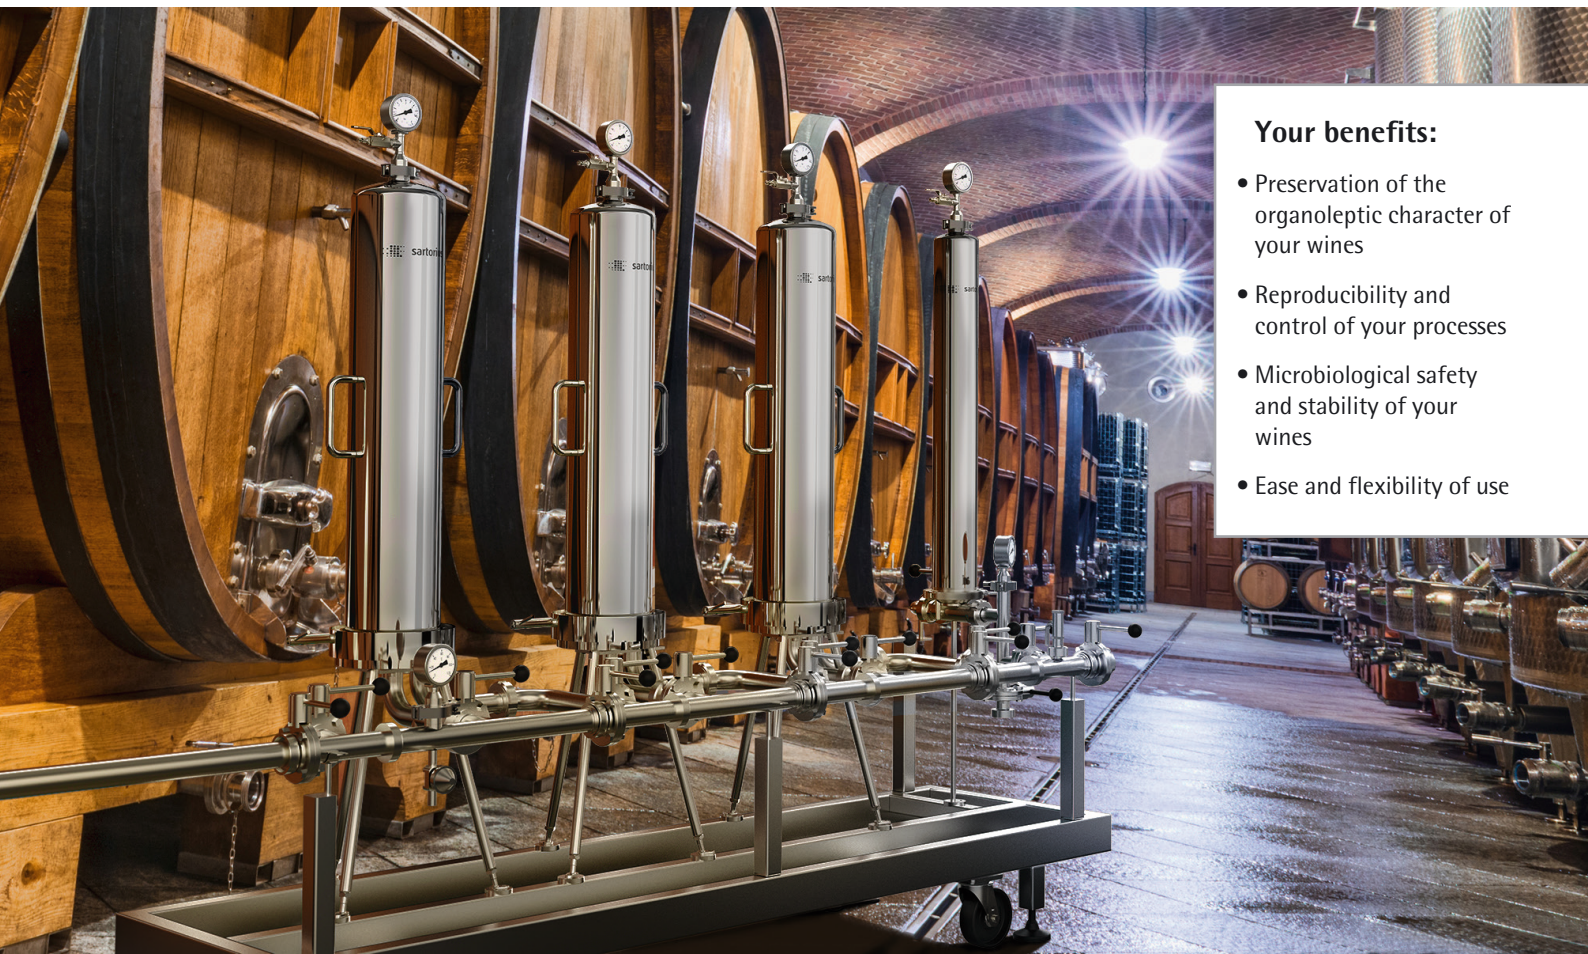

Your benefits:

- Preservation of the organoleptic character of your wines
- Reproducibility and control of your processes
- Microbiological safety and stability of your wines
- Ease and flexibility of use

Why choose cartridge filtration?

To clarify and filter all types of wine

From clarification to fine filtration up to the total retention of micro-organisms if necessary (yeasts, mold, bacteria).

You can safely filter all colors on the same cartridges. This filtration works with red, rosé, and white wines as well as still, sparkling, and aromatic wines.

For ease of use

Filter cartridges are very easy to install and use. You can tailor a specific filtration sequence to your wines and your micro-biological objectives. The option to use up to three filtration steps gives you great flexibility of use.

To control your filtration costs

The filter cartridges can be cleaned, sterilized, and reused several times, keeping down your filtration costs. Pushing through cartridges means that filtered wine losses are kept to a minimum.

To better preserve the organoleptic character of your wine

Cartridge filtration takes place inside a sealed system which protects your wine from any contact with oxygen.

Cartridge materials and design ensure that the filtration does not alter the structure of the wine and preserves its olfactory and gustatory properties during the filtration steps.

To safeguard the process and comply with standards, regulations, and certifications

Consumables such as filtration equipment on filter cartridges comply with all your customers' rules, certifications and standards. The Sartorius Group's quality policy gives you reliable updates and monitoring.

For the wide choice of filter cartridge types and pore sizes

- Prefilters: Sartopure® IND | PP3 | GF from 0.45 µm to 50 µm
- Final filters with testable absolute membrane: Vinosart; Sartobev; Sartocool 0.45 µ; 0.65 µ; 1 µm

To suit all your requirements.



Equipment for effective filtration

Sartorius equipment meets current regulations and certifications, so you can meet your customers' standards.

Filtration skids

Filtration skids in the Essential Range come with either two or three filtration steps that can deliver a filtration sequence tailored to your needs. The housings fitted with up to three cartridges permit output of 2,000 to 5,000 btl/hr depending on the version chosen.

Utilization is very simple, with highly intuitive pipework and manual valves. You can opt to use one, two, or three steps depending on the version chosen and the type of wines to filter.

The skids are manual and standard, and can be upgraded with options to, among other things, automatically manage overnight sterilizations and final membrane integrity tests, and reuse the sterilization water.

These skids can be connected to a CIP system.



Clean-In-Place (CIP) systems

A CIP system is a standalone, independent hot water production system. It cleans and sterilizes filtration skids in two or three filtration steps, and also sterilizes the pumping | filling assembly.

The customer need only supply cold water. The CIP system heats it, stores it, and keeps it at the right temperature for regeneration or sterilization.

CIP systems are available in 1000 L, 1500 L and 2000 L and will clean and sterilize complete lines (filtration and pumping | filling) up to 5 000 btl/hr. The hot water produced can be utilized for other purposes.



Sales and Service Contacts

For further contacts, visit www.sartorius-stedim.com

Europe

Germany

Sartorius Stedim Biotech GmbH
August-Spindler-Strasse 11
37079 Goettingen

Phone +49.551.308.0

Sartorius Stedim Systems GmbH
Robert-Bosch-Strasse 5 – 7
34302 Guxhagen

Phone +49.5665.407.0

France

Sartorius Stedim FMT S.A.S.
ZI des Paluds
Avenue de Jouques – CS 91051
13781 Aubagne Cedex

Phone +33.442.845600

Sartorius Stedim France SAS
ZI des Paluds
Avenue de Jouques – CS 71058
13781 Aubagne Cedex

Phone +33.442.845600

Austria

Sartorius Stedim Austria GmbH
Modcenterstrasse 22
1030 Vienna

Phone +43.1.7965763.18

Belgium

Sartorius Stedim Belgium N.V.
Rue Colonel Bourg 105
1030 Bruxelles

Phone +32.2.756.06.80

Hungary

Sartorius Stedim Hungária Kft.
Kagyló u. 5
2092 Budakeszi

Phone +36.23.457.227

Italy

Sartorius Stedim Italy S.r.l.
Via dell'Antella, 76/A
50012 Antella-Bagno a Ripoli (FI)

Phone +39.055.63.40.41

Netherlands

Sartorius Stedim Netherlands B.V.

Phone +31.30.60.25.080

filtratie.nederland@sartorius-stedim.com

Poland

Sartorius Stedim Poland Sp. z o.o.
ul. Wrzesinska 70
62-025 Kostrzyn

Phone +48.61.647.38.40

Russian Federation

LLC "Sartorius Stedim RUS"
Vasilyevsky Island
5th line 70, Lit. A
199178 St. Petersburg

Phone +7.812.327.53.27

Spain

Sartorius Stedim Spain, S.A.U.
Avda. de la Industria, 32
Edificio PAYMA
28108 Alcobendas (Madrid)

Phone +34.913.586.098

Switzerland

Sartorius Stedim Switzerland AG
Ringstrasse 24 a
8317 Tagelswangen

Phone +41.52.354.36.36

U.K.

Sartorius Stedim UK Ltd.
Longmead Business Centre
Blenheim Road, Epsom
Surrey KT19 9 QQ

Phone +44.1372.737159

Ukraine

LLC "Sartorius Stedim RUS"
Post Box 440 "B"
01001 Kiev, Ukraine

Phone +380.44.411.4918

Africa

Republic of South Africa

Sartorius South Africa (Pty) Ltd
Unit 4, Alphen Square South
853 16th Road
Midrand 1685, RSA

Phone +27.11.315.5444

Americas

USA

Sartorius Stedim North America Inc.
565 Johnson Avenue
Bohemia, NY 11716

Toll-Free +1.800.368.7178

Argentina

Sartorius Argentina S.A.
Int. A. Ávalos 4251
B1605ECS Munro
Buenos Aires

Phone +54.11.4721.0505

Brazil

Sartorius do Brasil Ltda
Avenida Senador Vergueiro 2962
São Bernardo do Campo
CEP 09600-000 - SP- Brasil

Phone +55.11.4362.8900

Mexico

Sartorius de México, S.A. de C.V.
Libramiento Norte de Tepotzotlan s/n,
Colonia Barrio Tlacateco,
Municipio de Tepotzotlan,
Estado de México,
C.P. 54605

Phone +52.55.5562.1102

leadsmex@sartorius.com

Asia | Pacific

Australia

Sartorius Stedim Australia Pty. Ltd.
Unit 5, 7-11 Rodeo Drive
Dandenong South Vic 3175

Phone +61.3.8762.1800

China

Sartorius Stedim (Shanghai)
Trading Co., Ltd.
3rd Floor, North Wing, Tower 1
No. 4560 Jinke Road
Zhangjiang Hi-Tech Park
Pudong District
Shanghai 201210, P.R. China

Phone +86.21.6878.2300

Sartorius Stedim (Shanghai)
Trading Co., Ltd.
Beijing Branch Office
No. 33 Yu'an Road
Airport Industrial Park Zone B
Shunyi District, Beijing 101300

Phone +86.10.8042.6501

Sartorius Stedim (Shanghai)
Trading Co., Ltd.
Guangzhou Branch Office
Room 1105
Xing Guang Ying Jing Building
No. 119, Shui Yin Road
Yue Xiu District, Guangzhou 510075

Phone +86.20.3836.4193

India

Sartorius Stedim India Pvt. Ltd.
#69/2-69/3, NH 48, Jakkasandra
Nelamangala Tq
562 123 Bangalore, India

Phone +91.80.4350.5250

Japan

Sartorius Stedim Japan K.K.
4th Fl., Daiwa Shinagawa North Bldg.
8-11, Kita-Shinagawa 1-chome
Shinagawa-ku, Tokyo, 140-0001 Japan

Phone +81.3.4331.4300

Malaysia

Sartorius Stedim Malaysia Sdn. Bhd.
Lot L3-E-3B, Enterprise 4
Technology Park Malaysia
Bukit Jalil
57000 Kuala Lumpur, Malaysia

Phone +60.3.8996.0622

Singapore

Sartorius Stedim Singapore Pte. Ltd.
10 Science Park Rd
The Alpha #02-13/14
Singapore Science Park II
Singapore 117684

Phone +65.6872.3966

South Korea

Sartorius Korea Biotech Co., Ltd.
8th Floor, Solid Space B/D,
PanGyoYeok-Ro 220, BunDang-Gu
SeongNam-Si, GyeongGi-Do, 463-400

Phone +82.31.622.5700



◀ www.sartorius-stedim.com